

# MK17

## ROUND PULL OUT KITCHEN MIXER

meir.

### HANDLE VARIANTS

Paddle:M

### FEATURES


### CARE

- Do not install tapware using any form of acetone silicones.
- Do not apply physical items (such as tools) directly to product.
- Never use house-hold or commercial detergents, citrus based cleaners, or abrasive cleaners.
- Clean using a mild washing soap solution rinsed, and dry with a soft cloth.
- Check for any product defects before installation.
- Refer to the installation manual for correct installation.

### SPECIFICATIONS

### TOLERANCES

Surface Tolerance

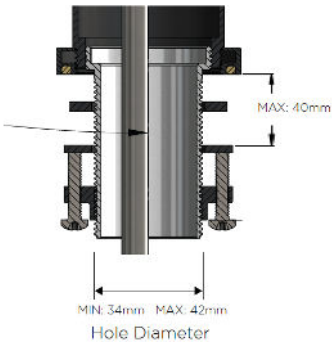

### FLOW RATE GRAPH

### EXPLODED VIEW

### CREDENTIALS