

MK17

ROUND PULL OUT KITCHEN MIXER



meir®

HANDLE VARIANTS

Paddle:M


FEATURES

CARE

- Do not install tapware using any form of acetone silicones.
- Do not apply physical items (such as tools) directly to product.
- Never use house-hold or commercial detergents, citrus based cleaners, or abrasive cleaners.
- Clean using a mild washing soap solution rinsed, and dry with a soft cloth.
- Check for any product defects before installation.
- Refer to the installation manual for correct installation.

SPECIFICATIONS

TOLERANCES

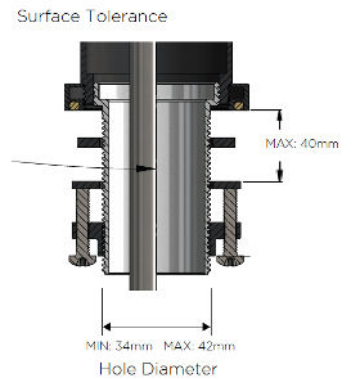

FLOW RATE GRAPH

EXPLODED VIEW

CREDENTIALS